

GALAXY

INSTRUCTIONS

Contents

1.0 Cubic Yard Polywoven Bag w/Inserts
Heavy Duty Liner
Closure Tie

Instructions

Step 1: Unfold container once until two sides are at 90 degrees to each other (see picture).

Step 2: Locate lift loop on inner fold (see picture).

Step 3: Place foot on side of container currently resting on ground and with your hand, pull lift loop until remaining sides "pop" out thus forming the box (see picture).

Step 4: Pull the closure flaps (2) out and around the outside of the container to make the interior cavity of the container easily accessible.



Step 5: Place liner in the container. Stretch the liner's extra portion out and around the container's outer walls to make the interior cavity of container easily accessible.

Step 6: Fill container with materials.

Step 7: Once full, twist the liner top and close with closure tie.

Step 8: Fold the closure flaps. First close one flap and locate the ties and loops. Insert the tail of one tie through the loop of the on the side of the bag and tie a knot to secure. Close the remaining flap and locate the ties and loops and repeat the process of securing with a knot. When tying knots, use any means practical to secure and ensure closure.

If you are experiencing any difficulties assembling your container, please call us immediately.

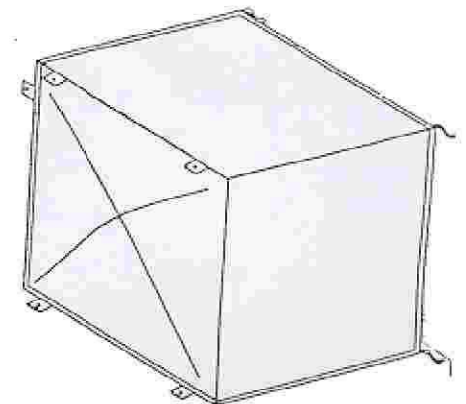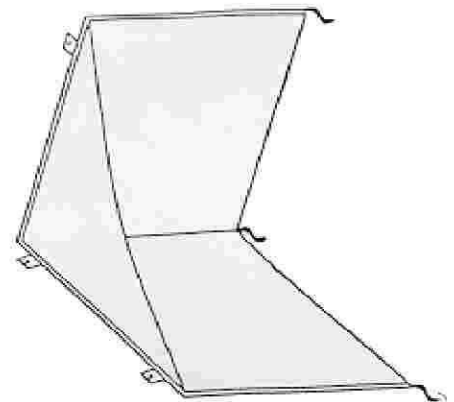

Questar, Inc

Packaging Solutions For The Waste Industry

(330)966-2070
www.QuestarUSA.com
info@QuestarUSA.com

6615 Promway NW
North Canton, Ohio 44720